










BOSCH Serie 4

1		→		→	
Inserire la biancheria e chiudere lo sportello.		Accendere l'asciugatrice impostando il selettore programmi su un programma qualsiasi.		Selezionare il tasto d'avvio.	
2		→		→	
Fine del programma.		Estrarre la biancheria.		Spegnere l'asciugatrice.	
3		→			
Svuotare il contenitore dell'acqua di condensa.		Pulire il filtro lanugine.			


BOSCH Serie 4

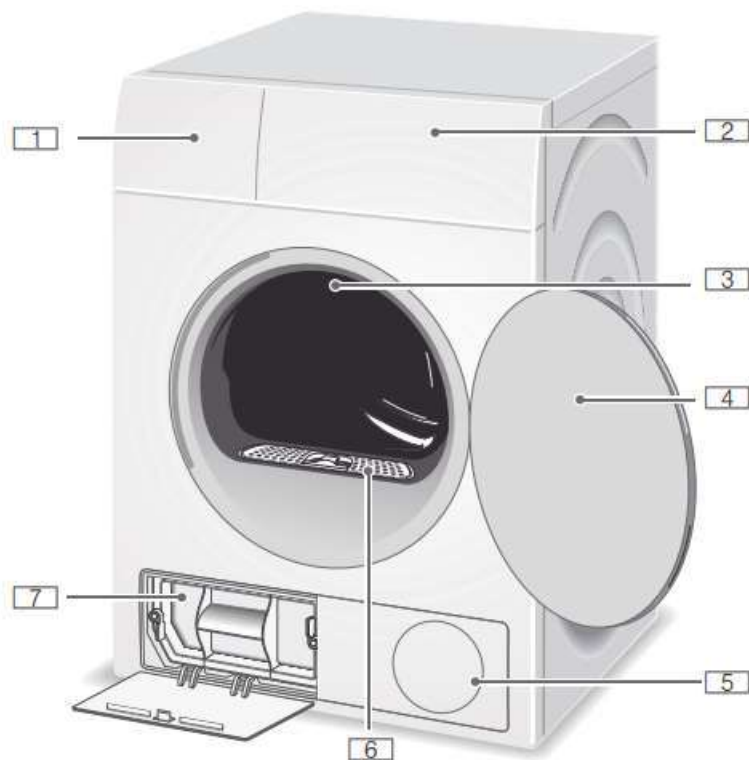

- 1 Contenitore dell'acqua di condensa
- 2 Pannello comandi e visualizzazione
- 3 Illuminazione interna del cestello*
- 4 Sportello dell'asciugatrice
- 5 Griglia di raffreddamento
- 6 Filtro lanugine
- 7 Filtro EasyClean

Display


Tasti sul display

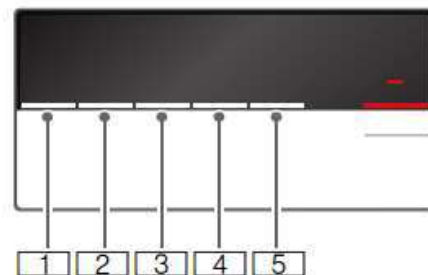

- 1 **Grado di asciugatura.**
- 2 **Tempo di asciugatura.**
- 3 **Fine fra.**
- 4 **Antipiega.**
- 5 **Delicato.**

Descrizione esaustiva di tutti i pulsanti da → *Pagina 25.*

Display

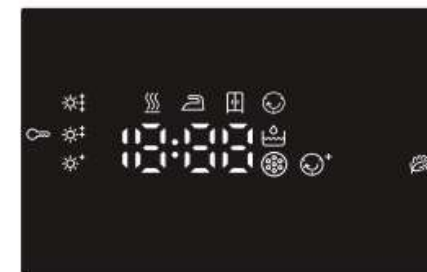

- Svuotare il contenitore dell'acqua di condensa → *Pagina 27.*
- Pulizia dei filtri EasyClean → *Pagina 32.*
- *P* - *End*: Avanzamento del programma: asciugatura, stiratura con ferro, asciugatura normale, antipiega, pausa e fine programma.
- Sicurezza bambini attiva → *Pagina 25.*
- È stata selezionata l'antipiega. Già selezionato.
- Grado di asciugatura selezionato.
- 1.27** Durata prevista del programma in ore e minuti.
- 3h** Il programma termina tra 3 h/ore selezionando il tempo di Fine fra.



1 Load the laundry and close the door.

Switch the dryer on by turning the programme selector to the required programme.


Press the Start button.



2 End of the programme.

Remove the laundry.


Switch the dryer off.

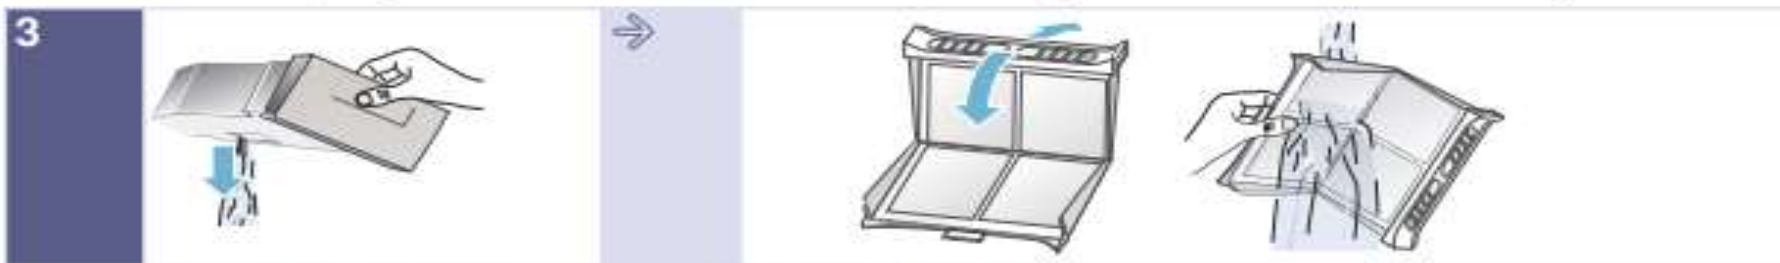

3 Empty the condensate container.

Clean the fluff filter.


BOSCH Serie 4

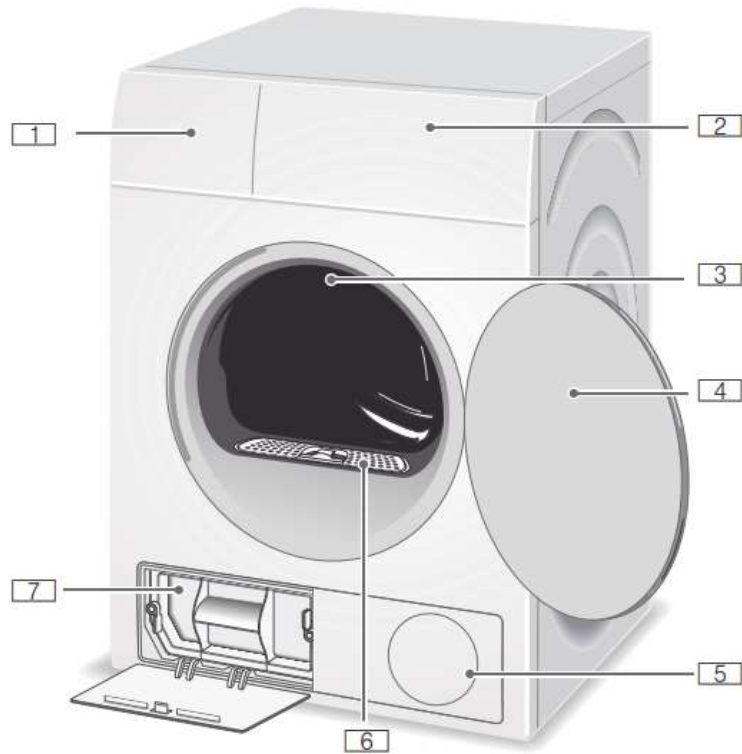

- 1 Condensate container
- 2 Control and display panel
- 3 Drum interior light*
- 4 Dryer door
- 5 Air inlet
- 6 Fluff filter
- 7 EasyClean filter

Display panel

Buttons on the display panel

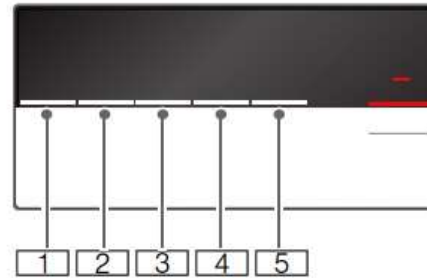

- 1 **Drying level.**
- 2 **Drying time.**
- 3 **Ready in.**
- 4 **Anti-crease.**
- 5 **Low heat.**

For a detailed description of all buttons, see → Page 22 onwards.

Display panel



- Empty the condensate container
→ Page 25.
- Clean the EasyClean filter
→ Page 29.
- **P - End**: Programme progress for Dry, Iron Dry, Cupboard Dry, Anti-crease, Pause and End of programme.
- Childproof lock active
→ Page 22.
- Anti-Crease selected.
- Low heat selected.
- Drying level selected.
- 1:27** Expected programme duration in hours and minutes.
- 3 h** Programme will end in 3 h/hours with the "Ready in" time selected.